

## Food Processor Attachment for **BOSCH** Mixers



The attachment is very similar for all 3 of the mixer styles. The attachment for the Universal (MUM6.series) is shown.

**The processor must be assembled and the lid locked in place before you can put it onto the machine.**

There is a block on the bottom which prevents the processor from attaching to the machine's motor base. (see photo) This is a designed safety feature so exposed blades cannot turn.



### **Assembly:**

1. The processor bowl must be in place and the tab locked into the handle.
2. Put in whatever blades and food you wish to process.
3. The lid must be in place and the tab locked into the handle. (see photo)

The 3<sup>rd</sup> step will move the safety block and allow the processor to attach to the machine.

The cover cannot be removed while the processor is on the machine. Take the entire attachment off of the motor base to remove the lid.

Most of the parts of the Food Processor Attachment can be washed in an automatic dishwasher. However, **do not** put in the white handle assembly in the dishwasher (this is the part that attaches to the machine). Wipe with a damp cloth only.